



# Sony Action Cam Mini HDR-AZ1 Battery Door Replacement

This guide will show how to properly replace the battery compartment door.

Written By: Mathieu LaFond



## INTRODUCTION

Is your battery door damaged or is the clasp broken?

---



### TOOLS:

- [Phillips #000 Screwdriver](#) (1)
-

## Step 1 — Battery



- To access the battery, first make sure the camera is out of the case.
- Push down on the door lock, located on the rear of the action cam.
- ⓘ The door is unlocked if the little yellow square is showing.
- Pull on the panel door, located on the side opposite the LCD screen, and it should now pop open.

## Step 2



- Open the side panel outward to reveal the battery.
- ⚠ Be sure not to break the small piece of plastic securing the door to the camera.
- Use the pull tab to pop the battery out of place.



## Step 3 — Battery Door



- Remove the circled 4 millimeter black screw adjacent to where the door is attached.

## Step 4



- Grab the small black bracket holding the ribbon on which the door is attached and pull it out.

## Step 5



- Pull the door straight back so the attaching ribbon is pulled taught and the door will come right off.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-08-07 08:11:52 PM.